
# **Waste Truck Driver User Manual**


ITS4mobility

Ver. 17.1 (X)

## The Main View

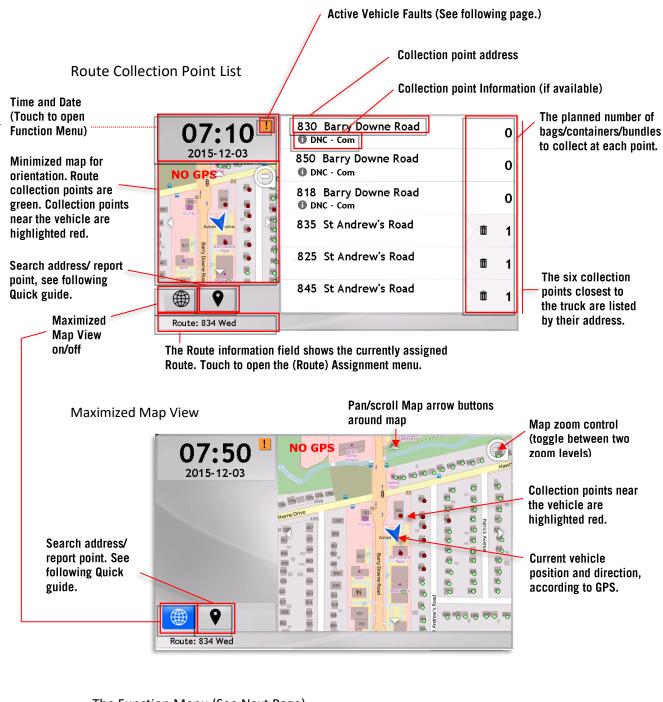


The Function Menu (See Next Page)

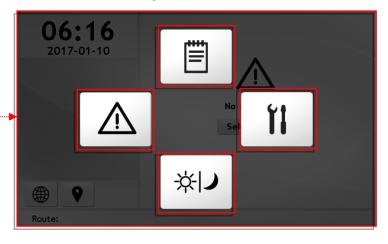

For available functions see next page.

Touch outside the function buttons to return to the Main View.

## **The Function Menu**

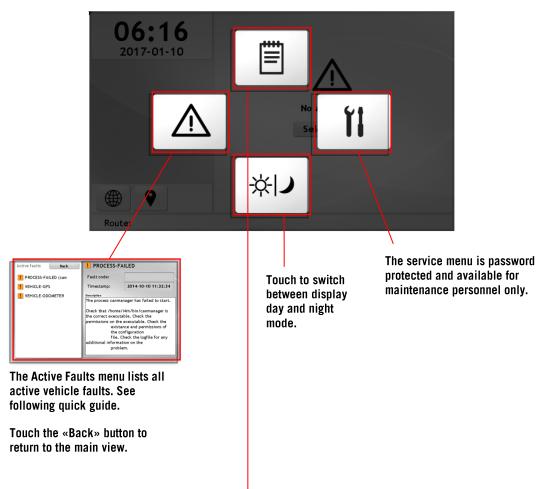




The (Route) Assignment menu allows you to select/de-select routes to service. See the following Quick Guides about how to do this.

Touch the «Back» button to return to the main view.


## **Quick Guides**

#### 1. Select Route

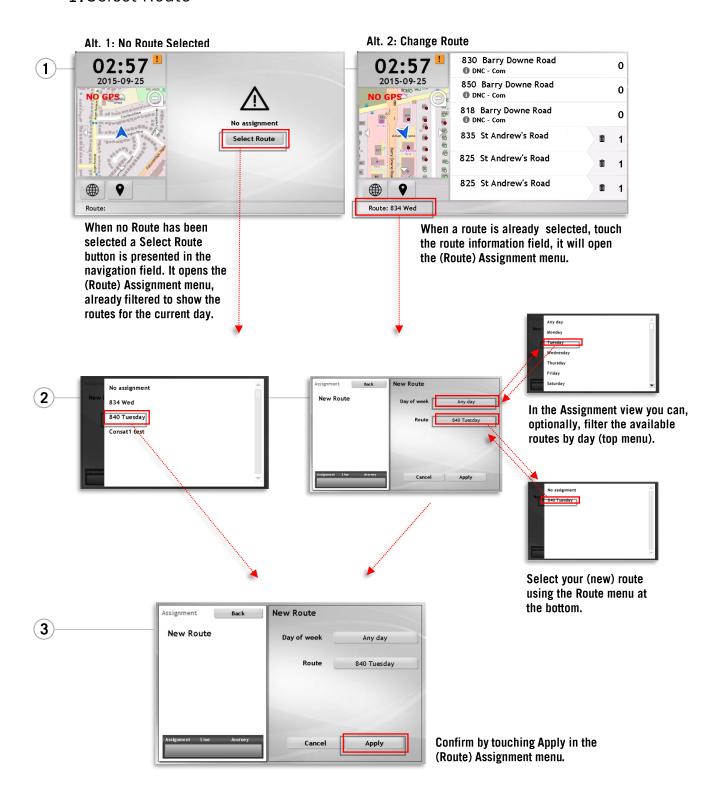


## 2. Quit (De-Select) Route

• Note: You do not have to quit your assignment when you have finished working for the day. The assignment will be cleared automatically the next day.

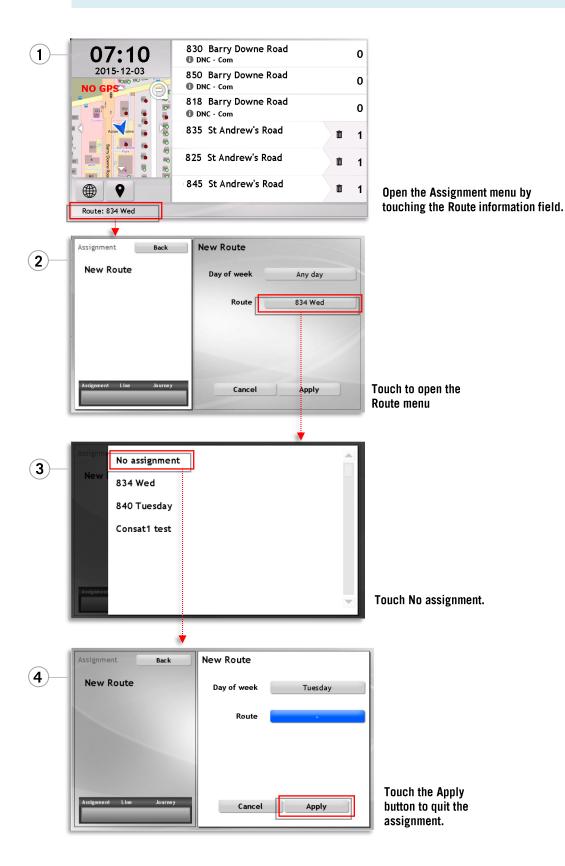


## 3. View Complete Information for Listed Address

• The information text for a collection point may be too long to fit the «shortlist» presentation.

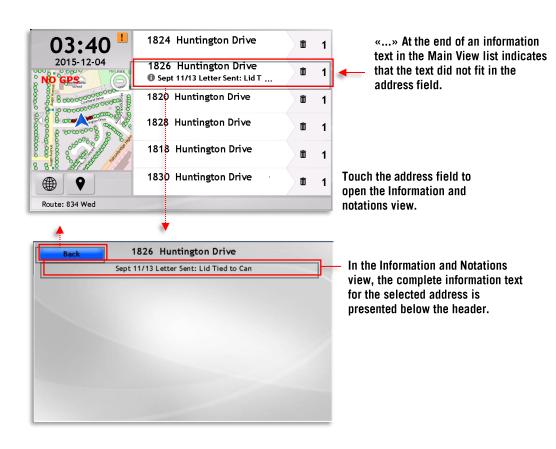

## 4. Search any Route Address (for Information and Notations)

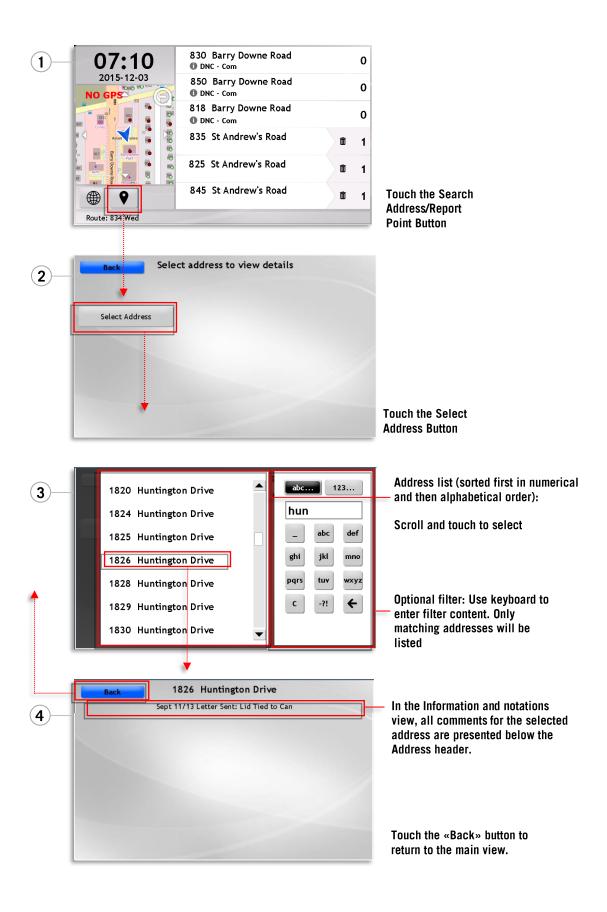


### 5. View (and Report) Active Faults

• Any active faults should be reported to your supervisor.


An active faults indicator to the right of the clock shows that the vehicle has one or more active faults.



Touch the time and date field to open the Function menu.

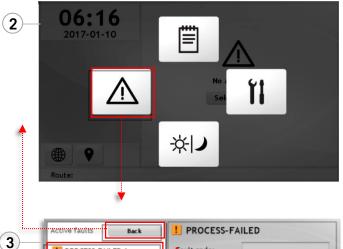

Touch the Active faults function button to open the Active faults menu.

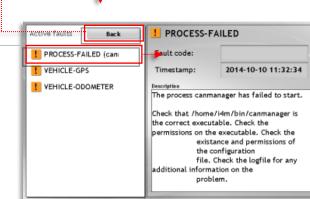

In the Active faults menu, all active faults are listed in the left section. Touch a particular fault to view details in the section to the right.

Report any active faults to your supervisor.

Touch the «Back» button to return to the main view.