Consat Telematics Solution

Felsökningsguide fordonssystem [BETA]

Version 23.7.(X)

© COPYRIGHT Consat Telematics AB 2023

All rights reserved.

The content of this document may be subject to revision without notice. Consat has no liability for typing errors in this document.

No part of this document may be copied, distributed, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language without the prior written permission of Consat.

Innehåll

1	In	ledning	5
2	Ge	enerellt arbetsflöde	6
3	St	artpunkt 1: FS/DFS och fordonssystem visar aktiva fel	7
	3.1	Aktiva fel i Fleet Studio FS: Hitta [fordon med] fel, steg för steg	7
	3.2	Aktiva fel i mjukvarudepån/DFS	9
	3.3	Aktiva fel i fordonsgränssnittet	10
	3.4	Systemtest i fordonsgränssnittet	11
4	St	artpunkt 2: Felrapport	12
5	Fö	rarplats: Skärm	13
	5.1	Skärmen visar inte någon bild	13
	5.2	Peknavigeringen fungerar men inte korrekt	15
	5.3	Peknavigeringen fungerar inte alls	16
6	M	ADT (Androidenhet)	17
	6.1	Enheten startar inte (svart skärm)	
	6.2	Aktivt fel: Ingen kontakt med MADT	
7	Sk	rivare (MADT)	18
	7.1	Skrivaren startar inte/ Inga utskrifter sker	
8	Кс	ortläsare (MADT)	18
	8.1	Kortläsaren kan inte läsa kort	
9	нι	JD	19
	9.1	XXX	19
10	Fo	rdonsdator och fordonssignaler	

3 (42)

	10.1 Fordonet rapporterar inte	20
	10.2 Aktivt fel: GPS	21
	10.3 Aktivt fel: Odometer	
	10.4 Aktivt fel: Dörrsignal	23
	10.5 Aktivt fel: Stoppsignal	24
11	Yttre skyltar	25
	11.1 Yttre skyltning felanmäld	25
12	Inre skärmar och LED-skyltar	27
	12.1 Installera om Consatmjukvara i skärmen	
	12.2 Testbild visas på skärm	
	12.3 Aktivt fel: Inre skärm	
13	Inre och yttre ljud	28
14	CCTV-system	29
	14.1 Xxx	
15	APC-system	
	15.1 xxx	
16	VHF-modem (signalljusprio)	31
	16.1 Aktivt fel: Ingen kontakt med VHF-modem	
17	Appendix A: Samla in diagnosfiler i fordonet	32
	17.1 Ladda ner diagnosfiler till "diagnoskort", steg-för-steg	
18	Appendix B: Fordonslarm i DFS/CM, fordonssystem	33

1 Inledning

xxx.

• Notera: xxx.

2 Generellt arbetsflöde

Xxx



3 Startpunkt 1: FS/DFS och fordonssystem visar aktiva fel

Många (/de flesta) av de fel som kan uppträda i fordonssystemet - och beroende på tillgänglig data, i fordonet - resulterar i larm. Då ett fordon har ett eller flera aktiva larm syns det i flera olika Consatgränssnitt: I fordonsgränssnittet, i DFS (mjukvarudepån) och i vår webapplikation Fleet Studio. (Även vår trafikledarapplikation, Traffic Stidio kommer inom kort att kunna visa detaljerad larmöversikt.)

Även om du förstås kan kontrollera aktiva larm/fel direkt i fordonet är det förstås oftast mest praktiskt att övervalka larmen centralt, i något av våra användarvänliga gränssnitt.

3.1 Aktiva fel i Fleet Studio

Vår webapplikation, Fleet Studio, är en bra startpunkt när du snabbt behöver hitta fordon med aktiva fel, och då du behöver se lite mer utförliga beskrivningar av de aktiva fel fordonen i din flotta har.

- Vyn Aktiva Fordon visar generell larmstatus per fordon och detaljvyn för ett valt fordon visar detaljerad beskrivning av alla aktiva fel i det fordonet.
- Vanligtvis används "Aktiva Fordon" för just övervakande av aktiva fordon, alltså fordon som rapporterat till (kommunicerat med) centralsystemet inom en viss tid, till exempel 30 minuter. Men du kan även välja att deaktivera det här tidsfiltret och då visar vyn *alla* fordon som någonsin kommunicerat med centralsystemet, vilket med driftsatta fordonssystem är detsama som alla fordon i din flotta. Även fordon som stått parkerade ett tag kommer alltså att visas i vyn.

FS: Hitta [fordon med] fel, steg för steg

- 1. Välj Active Vehicles-vyn i huvudemenyn.
- Om du vill inkludera alla fordon i visningen: Öppna filtermenyn och klicka ur "Filter max age" nu visas alla dina fordon i Active Vehicles.



3. Därefter: Öppna filtermenyn över Fault Status-kolumnen och klicka ur "Ok" felstatus. Nu inkluderas bara fordon med aktiva fel. (Vet du att du bara är interesserad av allvarliga fel kan du förstås även klick aur "Warning"-kategorin också.)



4. Klicka nu på sorteringskontrollen (pilen) för att sortera listan efter felstatus med röda (kritiska) fel överst.

t Status 🕂 Tyslers Address	Name	Line	Block	Journey	State of Charge (%)	Piece	Last Step	Fuel Level (%)	Battery Volt	^
Filter Filter	Filter	Filter	Filter	Filter	0 - 100	Filter	Filter	0 - 100	Filter	1
3 80102587	auto-Ericsson-2								27.1	т.
380102588	auto-Ericsson-1-test-u4g								18.2	÷.
380102589	auto-Ericsson-1-test								18.9	÷.
380109220	auto-B12M_387665							82.0	20.7	1
300115835	auto-B8R362173							83.0	27.9	1
380116873	auto-B12M_389867					Estação Tubo Central Centro, Curitiba, Paraná			28.0	1
1 3250118736	auto-811R_195530							100.0	27.9	1
380123049	auto-BOE198869				88.0				28.3	1
3 89922671	BAG_000002									1
1 3189922677	Pearl				100.0			96.0	28.3	÷.
3 89922678	Patience				5.0			97.0	25.7	E.
309922608	Stockholm7				100.0			74.0	24.7	E.
389922690	Stockholm4				3.0			97.0	28.2	1
1 3159922693	1491 - Hamburg1				5.0			97.0	24.2	1
3059999999	auto-niclaspc							47 .0	23.7	11
3130109435	Victoria-9435							92.0		T
3 3 30109436	Victoria-9435							92.0		T.
3150109437	Victoria-9437							93.0		1
3130109439	Victoria-9439							91.0		1
3130109440	Victoria-9440									1
3130109443	Victoria-9443							92.0		Ŧ
3130109445	Victoria-9445							92.0		T
30109445	Victoria-S445							55.0		

5. Öppna detaljvisningen för ett fordon med rad-menyn i högerkanten. Alla aktiva fordonsfel listas och beskrivs i sektionen Active Faults. Beskrivningen inkluderar även generellt lösningsförslag.

Notera: Klicka på en annan rad för att växla detaljvisningen till detta fordon.



Larmen visas inklusive "repair action". Använd dem som utgångspunkt när du felsöker fordonet.

3.2 Aktiva fel i mjukvarudepån/DFS

Även DFS/mjukvarudepån har en vy som listar alla fordon med aktiva fel i din flotta. Här finns också beskrivningar av de aktiva felen, även om gränssnittet är lite mer tekniskt och "suggested repair action" saknas i visningen (vilket visas i FS, se ovan).

- Aktiva fel i din flotta hittar du på fliken Fault Management/Active [Faults]
- För att se fel rapporterade av fordonen övriga system kan du klicka i Alarm Filter-kryssrutorna (tillgänglig data från fordonen varierar).
- Listan visar individuella fel ett fel en rad. Fordon kan alltså ha flera fel, vilket visas på flera rader.
- Klicka på en kolumnrubrik för att sortera tabellen efter innehållet till exempel efter fel/larm allvarlighet/"severity".
- Specifika feltyper kan du filtrera fram med fritextfiltret i Fault Code-kolumnen.
- En kort beskrivning av larmet hittar du i kolumnen Synopsis.

Klicka i för att se ev tillgängliga (icke-Consat) larm från fordonen. J1939 och J1587 är kommunikationsgränssnitt, telltales är larm som visas i förarens instrumentpanel.

Ourse Andre Are	and and a second s	*			
Active Faults	1				
-Alarm Filter	<u> </u>				
Tell Tales CJ1939 CJ16	587				
Kategori	Ita				
Flotta	lia	*			
Severity Distribu	ution	Fault Code Distribution			
198 Critical faults 198 Critical faults 198 Maior faults 19 Maior faults 19 Maior faults 19 Maior faults 19 July 140 / J	7 totannings	 Base of the second se	non Baull-Or. Inna gan		
Vehicle	Severity	Fault Code	Synopsis	Activated	LastCom
filter	filme .	filter	Rer,	filter :	filter
kyssLabb-AIC4	Critical	VEHICLE-TIC1R (4-20)	No contact with TIC1R device.	2014-06-27 12:18:59	2014-06-27 13:12:23
eyssLabb-AIC4	Critical	VEHICLE-GPS (4-19)	No NMEA input from GPS, seems that the GPS device has failed or is not correctly connected	2014-06-27 12:18:59	2014-06-27 13:12:23
yssLabb-AIC4	Critical	VEHICLE-DOOR-SIGNAL (4-44)	No input from door sensor, seems that the sensor has failed or is not correctly connected.	2014-06-27 12:18:59	2014-06-27 13:12:23
X4.TmFAC-Tannaz	Critical	Vehicle next star human (4.67)	Vahirla next ston hutton sizeal ont tranlari while on journay	2012-10-10 14 38 16	2014-00-27 13:12:23
350-004444	Critical	VEHICLE-APC (4-25)	No contact with APC (passenger counter) system	2017-11-21 13 19 28	2017-11-22 10 16 17
350-004444	Critical	VEHICLE-DOOR-SIGNAL (4-44)	No input from door sensor, seems that the sensor has failed or is not correctly connected.	2017-11-22 09 29 38	2017-11-22 10:16:17
X4-TmSkyss-Jonas	Critical	VEHICLE-APC (4-25)	No contact with APC (passenger counter) system	2022-09-15 13:08:12	2023-04-14 13:38:21
350-103333	Critical	VEHICLE-APC (4-25)	No contact with APC (passenger counter) system.	2017-11-24 14:13:16	2021-04-13 17:37:07
50-103333	Critical	VEHICLE-APC-DOOR-COUNTS-NOT-UPDATED-ON-JOURNEY (4-53)	APC counters from door [1] not updated while occupying a journey.	2017-11-28 14 59:56	2021-04-13 17:37:07
\$50-103333	Critical	VEHICLE-APC-DOOR-COUNTS-NOT-UPDATED-ON-JOURNEY (4-53)	APC counters from door [1] not updated while occupying a journey.	2017-11-28 14:59:56	2021-04-13 17 37:07
\$50-103333	Critical	VEHICLE-APC-COUNTS-NOT-UPDATED-ON-JOURNEY (4-52)	APC counters from source (0) not updated while occupying a journey.	2017-11-28 14:59:56	2021-04-13 17:37:07
X4-ImSkyss-Zenobie	Critical	Vehicle next stop button (4-67)	Vehicle next stop button signal not toggled while on journey	2020-11-19 23 47 56	2023-04-14 13 38 29
100-103333	Critical	Venice next stop button (4-67)	Venice next stop botton signal not togged while on journey.	2017-12-19 13:30:10	2021-04-13 17 37 07
X4-ITxPT-demo	Critical	VEHICLE-DOOR-SIGNAL (4-44)	No input from door sensor seems that the sensor has failed or is not correctly connected.	2018-02-06 17 54 59	2018-02-07 16:38:44
X4-ITxPT-demo	Critical	PROCESS-FAILED (cxe) (4-2)	The process cxe has failed to start.	2018-02-06 17 52 03	2018-02-07 16:38:44
X4-ITxPT-demo	Critical	VEHICLE-APC (4-25)	No contact with APC (passenger counter) system.	2018-02-06 17:55:20	2018-02-07 16:38:44
stvagnConsat-AIC4TmSkvss	Critical	Vehicle next stop button (4-67)	Vehicle next stop button signal not toggled while on journey.	2021-12-11 17:10:38	2022-06-09 17:04 18
350-258133	Critical	VEHICLE-APC (4-25)	No contact with APC (passenger counter) system.	2021-09-20 19:05:23	2020-04-22 14:56:32
X4-ITxPT-demo	Critical	PROCESS-CRASHED (cxe) (4-1)	The process cxe has crashed.	2018-02-06 17:51:23	2018-02-07 16:38:44
350-270108	Critical	VEHICLE-TOUCH (4-49)	Touch display not responding	2019-06-21 18:47:39	2018-03-12 15:52 17
350-248583	Critical	VEHICLE-APC (4-25)	No contact with APC (passenger counter) system.	2020-10-09 07 57:26	2020-04-22 14:57:10
350-248615	Critical	VEHICLE-APC (4-25)	No contact with APC (passenger counter) system.	2021-06-23 12 20 57	2020-04-22 14:59:01
350-258189		VEHICLE-GPS (4-19)	No NMEA input from GPS, seems that the GPS device has failed or is not correctly connected.	2022-03-14 10:03:27	2020-04-22 14:57:16
<u>850-248577</u>	Critical	VEHICLE-ODOMETER (4-18)	No odometer pulses received despite the fact that the vehicle is moving according to GPS.	2020-10-02 16:01:08	2020-04-22 14:54:56
K4-TmSkyssBag-Kalle	Critical	VEHICLE-APC (4-25)	No contact with APC (passenger counter) system.	2018-11-26 08:51:14	2018-11-26 10:03:55
350-258134	Critical	VEHICLE-TOUCH (4-49)	Touch display not responding.	2022-03-02 13:09:06	2020-04-22 11:50:59
X4-ImSkyssBag-Kalle	Critical	VEHICLE-MODEM (4-26)	No contact with the modern.	2018-11-26 10 04 27	2016-11-26 10:03 55
200-240576	Critical	VERILLE-UUOMETER (4-18) Vahista aast staa huttaa (4.67)	I no ocometer pulses received despite the fact that the vehicle is moving according to GPS.	2020-11-05 10:21:24	2020-04-22 14:59:50
350.248576	Critical	VEHICLE_APC (4.25)	No contact with APC (nassanger counter) system	2020-00-20 20 10:25	2020-04-22 14:59:50
350-248583	Critical	VEHICLE-TOUCH (4-49)	Touch display not responding	2020-10-09 08 16 21	2020-04-22 14:57:10
350-258105	Critical	VEHICLE-APC (4-25)	No contact with APC (passenger counter) system	2022-05-25 09:52:20	2020-04-22 14:52:02
X4-TmSkyss-Christopher	Critical	Vehicle next stop button (4-67)	Vehicle next stop button signal not toggled while on journey	2023-03-06 17 32 08	2023-04-14 13:38:34
350-248541	Critical	VEHICLE-DOOR-SIGNAL-OPEN-WHILE-DRIVING (4-82)	Door signal in open state while driving	2020-12-07 08:35:44	2020-04-22 14:59:52
350-240603	Critical	VEHICLE-APC (4-25)	No contact with APC (passenger counter) system.	2021-06-10 11:29:06	2020-04-22 14:57:07
MX4-TmSkyss-best-Magnus	Critical	VEHICLE-TOUCH (4-49)	I Journ display not responding	12022-10-31 08 50 02	2823-02-03 07 31 54

3.3 Aktiva fel i fordonsgränssnittet

Se nedan för hur du når Aktiva vel-vyn i förargränssnittet. I denna vy listas alla aktiva fel i vänstra sektionen. Till höger visas beskrivning av larmet du väljer i vänstra sektionen.



Tidsstämpel och beskrivning av det aktiva larm du valt I vänstermenyn över alla aktiva larm I fordonet. (Översta larmet om inget valts.)

3.4 Systemtest i fordonsgränssnittet

Systemtesten i följande kapitel hittar du i servicemenyn, se nadan. Du behöver operatörens pinkod för att öppna menyn.



För att öppna servicemenyn behöver du den operatörsspecifika fyrsiffriga pinkoden.

4 Startpunkt 2: Felrapport

Även om de flesta typer av fel kan detekteras automatuskt och resultera i larm som du hittar i gränssnitten vi beskrivit ovan, finns det saker som inte kan detekteras och därmed måste hittas och rapporteras manuellt.

5 Förarplats: Skärm

5.1 Skärmen visar inte någon bild

- 1. Kontrollera kabelanslutningar: Både skärm och MX4
- Skruvlås dras åt



2. Kontrollera att MX4:an har matning (PWR blinkar grönt/orange).



- 3. Kontrollera spänning strömkabel skärm
- Kontrollera alla säkringar för installationen, byt trasiga



- 4. Om ovan ej löser problemet: Testa med annan skärm
- Om OK, byt ut skärmen.
- 5. Om skärmbyte ej löser problemet: Byt fordonsdator (MX4)
- Om skärmen fungerar efter datorbyte, installera korrekt mjukvara enligt standard systeminstallation.

5.2 Peknavigeringen fungerar men inte korrekt

Xxx

Xxx

- 1. Kalibrera pekskärmen
- Tryck i minst fem sekunder tre gånger i följd någonstans på skärmen för att öppna kalibreringsläget.
- Tryck på kryssen som visas över skärmytan tills kalibreringen är klar.

2. Kör Skärmstest i Servicemenyn

Service Tillbaka Skylttest Mobitec Test Volymtest Skärmtest Digitala Ingångar Digitala Utgångar GPS-logg	Skärmtest Pixel	Kör testet Pekskärm
Tillbaka		Peka över hela skärmytan: OK? Avsluta genom att trycka på "Tillbaka"-knappen

3. Om kalibrering ej löser problemet: Byt skärm

5.3 Peknavigeringen fungerar inte alls

Xxx

1. Kontrollera USB-kabelanslutningarna



- 2. Testa med annan USB-kabel
- Om OK, byt ut kabeln
- 3. Om detta ej löser problemet: Byt skärm
- Kalibrera nya skärmen och kör Skärmtest enligt beskrivningen ovan.

6 MADT (Androidenhet)

6.1 Enheten startar inte (svart skärm)

- 1. Kontrollera kablar och spänningsmatning.
- 2. Om kablar och matning verkar OK, testa med annan enhet och byt om det löser problemet.

6.2 Aktivt fel: Ingen kontakt med MADT

- 1. Verifiera felet i Aktiva fel-vyn.
- 2. Kontrollera nätverkskablarna.
- **3.** Kontrollera även eventuell switch MADT-enheten är kopplad till och dess anslutning till MX4:an. Har switchen ström (lyser/blinkar lysdioderna)?
- **4.** Hittar du fel som du åtgärdar: Kör systemtestet Android Connection för att verifiera funktionen.

System test Tilbake	Android Connection
APC Test	Test connection to Android device
Android Connection	Logg: Siste kjøring: 2019-09-02 16:09:40 Running /home/i4m/sbin/systemtest/android presence check.sh
Audio ext.	Script return value: 0 wanted 0 Presence check for android @ 192.168.3.38 already connected to 192.168.3.38:5555
Audio int.	Android device found @ 192.168.3.38
С3	Test result: OK£Starting test at: 2019-09-02 16:09:40 Running /home/i4m/sbin/systemtest/android_presence_check.sh Script return value: 0 wanted 0
Can2	Presence check for android @ 192.168.3.38 already connected to 192.168.3.38:5555 Android device found @ 192.168.3.38
Central connection	Test result: OK
Depot Sync Test	
Door 🗨	Ikke i bruk Kjør

7 Skrivare (MADT)

7.1 Skrivaren startar inte/ Inga utskrifter sker

- Efter varje förändring nedan: Testa genom att skriva ut en "Salgrapport" (i Menyn till vänster i Salg-appen).
- 1. Kontrollera matningsspänning
- Tryck och håll inne på på/av-knappen på skrivaren. Startar den? Lyser skrivarens lysdioder?
- Om inte, är kontakterna och spänningsomvandlaren i cigarettändaruttaget inkopplade korrekt?
- 2. Kontrollera USB-kabeln till Androidenheten
- 3. Byt Skrivare

8 Kortläsare (MADT)

8.1 Kortläsaren kan inte läsa kort

- Använd Salg-appen och ett testkort du vet fungerar för att verifiera funktionen före och efter eventuell åtgärd.
- 1. Kontrollera USB-kabeln till Androidenheten
- 2. Om kabeln verkar OK, byt NFC-läsare

9 HUD

9.1 **XXX**

10 Fordonsdator och fordonssignaler

xxx

10.1 Fordonet rapporterar inte

- 1. Kontrollera alla kablar och kontakter till MX4:an.
- 2. Kör Systemtestet Central Connection (se till att du har bra mobiltäckning).

System test Tilbake	Central connection	
APC Test 🔶	connection test to important hosts.	
Android Connection	Logg: Siste kjøring:	Not Run
Audio ext.		
Audio int.		
СЗ		
Can2		
Central connection		
Depot Sync Test	Halas & kanalas — Maran	
Door 🗨	ikke i bruk Kjør	

- **3.** Får fordonet ej kontakt med centralsystemet trots bra täckning och korrekta anslutningar: Byt ut MX4:an.
- Kom ihåg att flytta SIM-kortet till utbytesenheten.

10.2 Aktivt fel: GPS

- **1.** Verifiera felet i Aktiva fel-vyn.
- 2. Kontrollera antennanslutningarna på MX4:an, framför allt GPS-antennen.



3. Kör systemtestet "GPS". Om OK (kontakt med GPS), gå vidare med testet nedan. EJ OK: Byt antenn.

System test Tilbake	GPS
APC Test	Test of the GPS connection.
Android Connection	Logg: Siste kjøring: 2019-09-12 12:39:55
Audio ext.	Starting test at: 2019-09-12 12:39:54 Waiting for position data Position data resized
Audio int.	Test result: OK
C3	
Can2	
Central connection	
Depot Sync Test	
Door	

4. Kör testet "GPS-logg" i Servicemenyn. Kör fordonet utomhus. Visar testet att GPS:en fungerar (Longitude och Lattitude ändrar sig när du kör)?

Service Tilbake	GPS-logg	:	
GPS-logg	Longitud	le	0.000000
0101055	Latitude	1	0.000000
	Altitude		10.9
Kilometerteller-logg	HDOP		1.30
	VDOP		2.10
SMS	Speed		0.0 m/s 0.0 km/h
	Heading		INVALID (-)
Tft provisionering	Tracked	satellites	8
Passasierteller	Logg:	Receiving data	Slette logg
russusjervener	GPS sentences 1	2:52:35 PM	
Manage and the st	GPGGA,105234.00	0,0000.0000,5,00000.000	0,W,1,08,1.3,10.9,M,,M,,*7e
varmer test	GPGSA,A,3,04,05	,09,12,,,24,,,,,2.5,1.3,2.	1*39
	GPGSV,2,1,8,01,4	0,130,50,02,24,004,50,03	,14,038,43,04,14,332,50,*65
Panikkalarm 🖉 🕳	GPR040, 105234.00	ю,я,0000.0000,5,00000.00	00, W, 0.00, 0.0, 120919,, 31
•	J		

10.3 Aktivt fel: Odometer

- **1.** Verifiera felet i Aktiva fel-vyn.
- 2. Kontrollera anslutningarna på MX4:an (Gröna kontakterna) och kabelmattans anslutningar i fordonet (färgade ITxPT-kontakterna eller kopplingsplinten i icke-ITxPT-fordon).



3. Kör systemtestet "Kilometerteller-logg" i Servicemenyn. Kör fordonet utomhus. Visar testet att odometern (C3-signalen) fungerar?

Service Tilbake	Kilometerteller-logg	
GPS-logg	C3 Factor	2 56.0
Kilometerteller-logg	Dist since door open	0
SMS	Odometer	0
Tft provisionaring	Speed m/s	km/h
int provisionering		
Passasjerteller	0.0	0.0
Varmar tast	Trip	0
varmer test	Last dist between doors	o
Panikkalarm 💌		Tilbakestill

4. Visar testet att C3-signalen fortfarande saknas, kontakta Consat.

10.4 Aktivt fel: Dörrsignal

- **1.** Verifiera felet i Aktiva fel-vyn.
- 2. Kontrollera kablar mellan fordon och MX4 och att kontakterna i båda ändar sitter i.
- Är kablarna kopplade till en plint i fordonet, verifiera att kablarna som är märkta med funktion sitter korrekt.
- 3. Kör testet dörr.

(Tryck "Kör" för att starta testet, öppna och stäng dörrarna och verifiera I loggfältet att signalen går fram.)

System Test Back	Door
Depot Sync Test	Test of the door signal connection.
Door	Log: Last run: Not Run
GPS	
Int. Passenger Display	
Next stop button	
Panic Button	
Sign Frame Test	
Sign Test Code	
Signs 🗾	Not in use Run

10.5 Aktivt fel: Stoppsignal

- **1.** Verifiera felet i Aktiva fel-vyn.
- **2.** Kontrollera kablar mellan fordon och MX4 och att kontakterna i båda ändar sitter i.

Är kablarna kopplade till en plint i fordonet, verifiera att kablarna som är märkta med funktion sitter korrekt.

3. Kör testet Next Stopp Button.

(Tryck "Kör" för at starta testet, tryck in stanna-knapp och verifiera I loggfältet att signalen går fram.)

System Test Back	Next stop button	
Depot Sync Test	Test of the next stop button signal connection.	
Door	Log: Last run:	Not Run
GPS		
Int. Passenger Display		
Next stop button		
Panic Button		
Sign Frame Test		
Sign Test Code		
Signs	Not in use Run	J

11 Yttre skyltar

11.1 Yttre skyltning felanmäld

- 1. Kontrollera Aktiva fel-vyn: Flera olika sorters fel kan visas och även om skylten manuellt växlats till styrning av extern kontrollenhet.
- Visar Aktiva fel att extern skyltstyrning är inkopplad, leta upp omkopplaren för detta som normalt är placerad på kablaget nära MX4:an och uppmärkt med etikett. Slå om till automatisk skyltstyrning.
- **3.** Visar aktivt fel att kontakt med skyktar saknas: Kontrollera kontakter och kablage, både ute vid skyltarna och i MX4:an.
- **4.** I Servicemenyn: Kör "Skylttest" Låt testalternativen vara "Som konfigurerat" och "Frame". Tryck på "Bruk" för att köra testet och verifiera att alla fordonets skyltar visar en ram.



5. I Systemtest: Kör testet "Signs" och verifiera att alla skyltar visar en address.



• xxx.

12 Inre skärmar och LED-skyltar

Xxx

12.1 Installera om Consatmjukvara i skärmen

Om skärmen inte visar consats testbild eller normal turvy, kan du behöva installera om mjukvaran i skärmen, se dokumnetet "**Fordonssystem administrativa funktioner**" för hur du gör detta.

12.2 Testbild visas på skärm

1. Om testbild visas är skärmen ej driftsatt.



2. Driftsätt skärmen enligt beskrivningen i dokumentet "Fordonssystem administrativa funktioner". (om det är flera skärmar i bussen).

12.3 Aktivt fel: Inre skärm

- 1. Verifiera felet i Aktiva fel-vyn.
- 2. Kontrollera/åtgärda spänningsmatning kablar och säkringar och nätverkskablarna. Kontrollera även eventuell switch skärmarna är kopplade till och dess anslutning till MX4:an.

Notera: Nätverkskabeln ska vara kopplad till port 1 på varje skärm. (Vid aktivt nätverk blinkar lysdioden vid nätverksanslutningen på skärmen.)

Kabeln från MX4:an till Switchen ska vara kopplad till port ETH 0 på MX4:an.

13 Inre och yttre ljud

Xxx

System test Tilbake	Audio ext.
APC Test	Test exterior audio.
Android Connection	Logg: Siste kjøring: Not Run
Audio ext.	
Audio int.	
С3	
Can2	
Central connection	
Depot Sync Test	lkka i bruk Kiar
Door 🗨	

14 CCTV-system

14.1 Xxx

15 APC-system

15.1 xxx

16 VHF-modem (signalljusprio)

16.1 Aktivt fel: Ingen kontakt med VHF-modem

- 3. Verifiera felet i Aktiva fel-vyn.
- 4. Kontrollera anslutningar och kablar
- Kontrollera även antenn och antennkabel.
- Om lösa kablar hittats och kopplats in: Kör systemtestet TSP Modem status (se nedan). OK?
- 5. Kontrollera matningsspänning
- Kontrollera matningsspänningen genom att koppla in ett modem du vet fungerar. Kör testet TSP modem status.

System test Tilbake	TSP Modem
APC Test	Get TSP VHF Modem status
Android Connection	Logg: Siste kjøring: 2019-09-13 10:49:11
Audio ext.	Starting test at: 2019-09-13 10:49:11
Audio int.	Checking status Modem responded, send message
С3	Test result: OK
Can2	
Central connection	
Depot Sync Test	
Door 🗾	

- Om testet är ej OK: Kontrollera säkringar och kablar.
- 6. Byt Modem
- 7. Kör systemtestet TSP Modem status. OK?

17 Appendix A: Samla in diagnosfiler i fordonet

- Det enklaste sättet att hämta diagnosfiler från ett fordon för "djupare" felsökning är oftast att använda DFS/CM (mjukvarudepån) för att begära att fordonet laddar upp filerna se "Configuration Manager Reference Manual" för hur du gör detta.
- Kan fordonet däremot inte kommunicera med centralsystemet behöver du ladda ner diagnosfilerna manuellt på plats, till ett minneskort förberett för detta, ett så kallat "Diagnoskort".
- I CM finns funktioner för att göra diagnoskort. Se "Configuration Manager Reference Manual" för hur du gör detta.
- När du i fordonet laddat ner diagnosfilerna till minneskortet enligt nedan sätter du kortet i en kortläsare kopplad till din dator och mailar därefter filerna till Consat för felsökning.

17.1 Ladda ner diagnosfiler till "diagnoskort", steg-för-steg

- 1. Gör ett diagnoskort i DFS (/CM) och ladda ner filterna till en USB-sticka (MX4) eller ett CF-kort (AIC 4).
- I fordonet: Sätt in diagnoskortet i fordonsdatorns USB-port/kortläsare. Överföringen av diagnosfilerna ska starta direkt. Under överföringen blinkar FUNC-lysdioden (MX4) gult - förutsatt att dioden fungerar. När FUNC slutat blinka gult är överföringen klar och du kan ta ut stickan/kortet.
- 3. Om FUNC-lysdioden inte blinkar är den nog trasig. Vänta då minst en minut innan du tar ut kortet ur fordonsdatorns kortläsare.
- 4. Sätt diagnoskortet som nu innehåller diagnosfilerna i en kortläsare kopplad till en dator. Kontrollera att en ny mapp med fordonets hårdvaru-ID har skapats. (Denna innehåller diagnosfilerna).
- 5. Notera: Om ingen ny mapp har skapats på kortet: Testa att åter sätta kortet i fordonsdatorns kortläsare och starta om datorn (slå av strömmen och sätt på den igen efter någon minut). Skapas fortfarande inte någon ny diagnosfilmapp på kortet, skicka in fordonsdatorn till Consat Telematics för felsökning.
- 6. Om du nu har en diagnosfilmapp på kortet: Zippa och maila denna till Consat Telematics, tillsammans med en problembeskrivning, för analys/felsökning.

18 Appendix B: Fordonslarm i DFS/CM, fordonssystem

- Notera att beskrivningen nedan är på engelska. (De flesta larm har även motsvarande Svenska beskrivningar och problemlösningstexter.)
- FMS telltale-fel från fordonet beskrivs ej i denna lista.

Fault	(Synopsis), Description	Proposed Repair Action
PROCESS-CRASHED ({0})	The process {0} has crashed	Check the log file for additional information. Check the configuration file for errors. Verify that {1} is the correct binary.
PROCESS-FAILED ({0})	The process {0} has failed to start	Check that {1} is the correct executable. Check the permissions on the executable. Check the existence and permissions of the configuration file. Check the log file for any additional information on the problem.
IP_HOST_UNREACHABLE	The host {0} is unreachable	
SERVICE_UNREACHABLE	The service {0} is unreachable	
TCP_CONNECT_FAILURE	Could not connect to the service "{2}" at "{0}:{1}".	Verify that the service "{2}" is running. Check the hostname ("{0}")and port number ("{1}") of the service
SERVICE_UPDATE_MISSING	The service {0} {1} at {2} (version {5} system address {3}:{4}) is no longer sending updates	Verify that the host {2} is reachable. Verify that the service {0} {1} is running. Restart the service if necessary
RESOURCE_LIMIT_ERROR	RESOURCE-LIMIT-ERROR ({0}) </td <td>Resource {0} has been outside interval {1} and {2} for {3} seconds.</td>	Resource {0} has been outside interval {1} and {2} for {3} seconds.
DATABASE-ERROR ({0})	Database {0} has malfunctioned	
DATABASE_UNREACHABLE	The {2} database, of the type {3}, on {0} is unreachable.	
CORBA_SERVER_UNREACHABLE	The {2} corbaserver, on {0} is unreachable.	

Fault	(Synopsis), Description	Proposed Repair Action
WEB_SERVICE_UNREACHABLE	Webservice "{0}" ({1}) is unreachable	
SYSTEM_TIME_ERROR	The time on {0} is wrong with {1} seconds	
PROTOCOL_ERROR	The protocol limit {3} was exceded {2} on channel {0} with the interval length {1},	
INFORMATION_DISPLAY_UNREAC HABLE	The information display is unreachable	
URL_UNREACHABLE	The URL is unreachable	
DETECTOR_FAILURE	The detector fails	
VEHICLE_ODOMETER	No odometer pulses were received even though the vehicle is moving according to GPS	Run the test program in the service menu. Check electrical connections
VEHICLE_GPS	No NMEA input from GPS seems that the GPS device has failed or is not correctly connected	Run the test program in the service menu. Check electrical connections
VEHICLE_TICIR	No contact with the TICIR device	Run the test program in the service menu. Check electrical connections
VEHICLE_SIGN	No contact with sign {0}, on address {1}, using protocol {2}.	Run the test program in the service menu. Check electrical connections.
VEHICLE_GATEWAY_UNREACHAB LE	No contact with a gateway on the local network.	Run the test program in the service menu. Check gateway and network settings
VEHICLE_DEPOT_UNREACHABLE	No contact with remote depot system	Run the test program in the service menu. Check wireless communication device
VEHICLE-FARE-BOX	No contact with Farebox unit	Run test program in the service menu
VEHICLE-APC	No contact with APC (passenger counter) system	Run the test program in the service menu. Check connections

Fault	(Synopsis), Description	Proposed Repair Action
VEHICLE_MODEM	No contact with the modem	Run the test program in the service menu. Check connections
VEHICLE_CAN	No contact with CAN bus	Run the test program in the service menu. Check connections
VEHICLE_J1708	No contact with the J1708 bus	Run the test program in the service menu. Check connections
VEHICLE_DST	Invalid checksum detected in DST(Data parameter set). </td <td>Please reprogram the DST</td>	Please reprogram the DST
VEHICLE_LAMP_AND_FAULT_STA TUS	Driver cluster fault indicator status Fault level: {0} ["alarm"->red lamp, "warning"->yellow lamp, "info"->info lamp, "clear"->no lamp] Sending MID: {1} Fault PID/PPID/SID/PSID: {2} Fault type: {3} FMI: {4}	See the Volvo service manual for detailed information.
VEHICLE_J1587_FAULT	Fault level: {0} ["alarm"->red lamp, "warning"->yellow lamp, "info"->info lamp, "clear"->no lamp] Sending MID: {1} Fault PID/PPID/SID/PSID: {2} Fault type: {3} FMI: {4}	See Volvo service manual for detailed information
VEHICLE_BEA_FAULT	Fault Number: {0} ECU Address: {1} FMI: {2} Occurrences: {3} Group Mask: {4}	See Volvo service manual for detailed information
VEHICLE_J1939_FAULT	Spn: {0} Source Address: {1} FMI: {2} Occurrences: {3}	See Volvo service manual for detailed information
VEHICLE_FMS_TELL_TALE	ld: {0}	See Volvo service manual for detailed information
VEHICLE_VERSION_REQUEST_MIS SING	Missing version request for node {0} Node: {0} Last request: {1} Threshold: {2} System address: {3} Hwid: {4} Software: {5}	Verify that the node is in service and if so diagnose the computer/network.
	103001003. [0]	

Fault	(Synopsis), Description	Proposed Repair Action
VEHICLE_CUSTOM_FAULT	Generic FMS condition Condition: {0} Current Value: {1}	
APC_NO_DATA_AVAILABLE	APC data not received from vehicle Last successful upload: {0}	
APC_EXTERNAL_SYSTEM_PUSH_ FAILURE	Not able to push APC data to an external system Uri: {0}	
UPLOAD_SERVICE_NO_DATA_UP LOADED	No data uploaded from the vehicle since the threshold Node id: {0} Last successful upload: {1} Upload pattern: {2}	
TRAFFIC_MEASUREMENT_LOW_F LOW	Få fordon har passerat slingan (VT) Det har passerat {4} över slinga {0} med system-adress {1} namn {2} {3} mellan {5} och {6}.	
LOOP_ERROR	Det har detekterats fel på slingan. Slinga {0} med system-adress {1} namn {2} {3} har .	
MR_SYNC	Msgrouters are not in sync. Msgrouter {0}:{1} and {2}:{3} not in sync	
VEHICLE_DATA_ERROR	DATA-ERROR ({0}) Process "{0}" has detected data error on data source "{2}" with value "{3}" for vehicle "{1}"	
VEHICLE_DOOR_SIGNAL	VEHICLE-DOOR-SIGNAL No input from the door sensor. It seems that the sensor has failed or is not correctly connected	Run the test program in the service menu. Check electrical connections
VEHICLE_DOOR_SIGNAL_OPEN_ WHILE_DRIVING	Door signal in an open state while driving.	Run the test program in the service menu. The door signal is either stuck in the open state or has the wrong polarity. To clear

Fault	(Synopsis), Description	Proposed Repair Action
		the alarm, the vehicle must be driven with doors closed.
VEHICLE_EXTERNAL_SIGN_CONT ROLLER_OVERRIDE	External sign controller overrides internal sign control	Check external sign controller switch and/or electrical connections
VEHICLE_TOUCH	Touch display not responding	Check electrical connections and power to display.
UDP_NODE_SPAM	Abnormal communication for UDP node with system address {0}. Limit of {1} messages reached in less than {2} seconds	Check cudpgw logs for more details. There might be a lot more nodes spamming, the first node that spams triggers this alarm. But the alarm is not cleared until all spamming nodes are back to normal. </td
TASK_SCHEDULER_TASK_ERROR	The task {0} has failed to run by Tmix.Cap.Platform.Process.Task Scheduler	Check the logfile for process Tmix.Cap.Platform.Process.TaskSc heduler
VEHICLE_APC_COUNTS_NOT_U PDATED_ON_JOURNEY	APC counters from source {0} and door {1} are not updated while occupying a journey	Run the test program in the service menu. Check connections
VEHICLE_APC_DOOR_COUNTS_ NOT_UPDATED_ON_JOURNEY	APC counters from door {1} not updated while occupying a journey.	Run the test program in the service menu. Check connections.
VEHICLE_GPS_NO_FIX	The GPS got no fix for {0} seconds of uptime	Run the test program in the service menu. Check connections and antenna
VEHICLE_GPS_NO_FIX_ON_JOU RNEY	The GPS got no fix for {0} seconds spent on the journey	Run the test program in the service menu. Check connections and antenna.
EXCESSIVE_NODE_DOWNLOADS	Abnormal download communication. Limit {0}.	Check depot logs for more details.
EXCESSIVE_NODE_UPLOADS	Abnormal upload communication. Limit {0}.	Check depot logs for more details.
MQTT_CONNECTION_LOST	MQTT connection lost	MQTT broker connection lost.
MQTT_TETRA_CONNECTION_DO	Lost Tetra MQTT connection	Check ethernet switch/cable or MQTT broker
MQTT_TETRA_SEND_ERROR	Multiple MQTT send error	Check ethernet switch/cable or MQTT broker

Fault	(Synopsis), Description	Proposed Repair Action
DISPLAY_BACKLIGHT_SENSOR_F AILURE	Display backlight error	Check display, the backlight sensor cannot detect any light being emitted.
VEHICLE_IGNITION_SIGNAL	No input from the ignition pin, seems that the input has failed or is not correctly connected.	Run the test program in the service menu. Check electrical connections.
VEHICLE_GPS_CRAZY_JUMP	The GPS made a crazy jump of {0} meters. Positions being filtered: {1}.	Reset GPS unit.
DATAIMPORT_IMPORT_FAILED	Dataimport import failed.	Check import
DATAIMPORT_VERIFY_FAILED	Dataimport verify failed.	Check import
DATAIMPORT_DEPLOY_FAILED	Dataimport deploy failed.	Check import
VEHICLE_NEXT_STOP_BUTTON	Vehicle next stop button signal not toggled while on the journey.	Check the next stop button signal.
VEHICLE_PANIC_BUTTON	The vehicle panic button signal shorted at startup.	Check the panic button signal.
VEHICLE_ODK_CONNECTION	The ODK is not responding to Pld 501 since {0} seconds	Check the ODK power and its connection.
DISCO_SLAVE_MISSING	No response from a disco slave unit, slave ID: {0}	Check connections of connected slave units in the <u>Disco</u> sign group setup. Also, check master/slave configurations.
DISCO_SLAVE_UNKNOWN	A disco slave unit that is unknown is discovered by the master, slave ID: {0}	Check the configuration of the master unit in the Disco display group.
CAMERA_CONTROL_CONNECTI ON	Connection to camera control for {0} lost	Check wiring
VEHICLE_CCTV_CONNECTION	No contact with CCTV (camera) system.	Run the test program in the service menu. Check wires and connectors.
VEHICLE_CCTV_SYSTEM	Error CCTV (camera) system, status:	Run the test program in the service menu. Check the CCTV control box. Check wires and connectors.

Fault	(Synopsis), Description	Proposed Repair Action
VEHICLE_CCTV_CAMERA	Error status for CCTV cameras: {0}. Connected cameras: {1}	Run the test program in the service menu. Check cameras, wires and connectors.
VEHICLE_CCTV_DISK	CCTV disk storage is not active. Status: {0}	Run the test program in the service menu. Check the CCTV control box.
VEHICLE_SENSOR_ALCOLOCK	No contact with the alcohol lock unit.	Run the test program in the service menu. Check wires and connectors.
INFORMATION_DISPLAY_FLAPPIN G	Communication with the information display is 'flapping, meaning it goes up and down several times a day.	
VEHICLE_INTERIOR_PASSENGER_ DISPLAY_UNREACHABLE	The interior passenger display at IP: {0} is unreachable.	Run the test program in the service menu. Is the display powered on? Check network cables. Are the correct network ports used?
VEHICLE_TRAFFIC_DATABASE_VE RSION_MISMATCH	The traffic database is not in sync with the backend.	Make sure the unit has a mobile connection to the backend and trigger a sync
DEPOT_EXCESSIVE_SYNC	A node {0} is downloading excessively.	Make sure the unit is healthy
DISCO_CONNECTION_LOST	Disco client lost connection to the server, timetable backup {0}	Make sure the unit is healthy
VEHICLE_SIGNAL_IO_ERROR	A signal source in failstate, details {0}	Check connections and wires
VEHICLE_INTERIOR_TEMP_SENSO R	Vehicle interior temp sensor not producing valid values.	Check wiring or sensor.
VEHICLE_HEATER_NOT_STARTED	The heater is blocked for some reason.	Check fault codes of the heater and the heater.
VEHICLE_TSP_MODEM	There is no data received from the TSP modem	Check fault codes and wiring
VEHICLE_PROCESS_HUNG_REST ART	Found hung process that was restarted	

Fault	(Synopsis), Description	Proposed Repair Action
VEHICLE_PROCESS_HUNG_REBO OT	Found hung process, restart failed, rebooted	
VEHICLE_DRIVING_MONITOR_C ONNECTION	There is no data received from the {0} driving monitor	Check fault codes and wiring
VEHICLE_DRIVING_MONITOR_CA MERA_ERROR	There is no data from the {0} driving monitor camera, video channel: {1}	Check fault codes and wiring
VEHICLE_DRIVING_MONITOR_IN DICATOR_ERROR	{0} Driving monitor driver indicator (small display) not responding	Check fault codes and wiring
VEHICLE_EXTERNAL_POWER_NO T_CONNECTED	The external power cable should be connected when the vehicle is parked in the depot area.	Connect the external power. If already connected, troubleshoot the connectors and the corresponding in signal to the MX4 unit.
SOFTWARE_BUG	A software bug has been detected	Contact supplier/developer
VEHICLE_HEATER_NOT_HEATING	The indoor temperature is not rising even though the heater is activated. Temperature has gone from {0} to {1} degrees during {2} minutes of heating.	Report the error to the heater system
VEHICLE_HEATER_FAULT_CODE_ ACTIVE	The heater is generating an active fault code.	Report the error to the heater system supplier
VEHICLE_DISPLAY_CONTROLLER	Display controller not responding.	Check the controller board
VEHICLE_INTERIOR_PASSENGER_ DISPLAY_MISMATCH	DPI Screen route not matching journey route {0}	Contact supplier/developer
VEHICLE_ASSIGNMENT_MISMATC H	{0} has another assignment: {2}. Our: {1}	Check the assignment and make sure it's correct.
VEHICLE_REMAINING_RANGE_IN SUFFICIENT	Seems like the remaining battery range is not sufficient to fulfil the current trip. SOC is {0}, estimated remaining range is {1} meters, while distance left on current trip is {2} meters.	Cancel the trip and recharge batteries at the nearest charging station.

Fault	(Synopsis), Description	Proposed Repair Action
VEHICLE_EXCESSIVE_UNEXPECTE D_REBOOTS	System detected {0} unexpected reboots in {1} seconds	Check power source to MX4.
VEHICLE_RTC_BATTERY_DRAINE D	If the battery for the internal clock is drained, the clock may be inaccurate	Check power source to MX4.
VEHICLE_HIGH_POWER_CHARGE R_NOT_CONNECTED	The high power charger is not connected. {0} Details: {1}	Connect the charger. If already connected, check signal that should reflect that the charger is connected or not.
VEHICLE_HIGH_POWER_CHARGI NG_PROBLEM	The high power charger gives insufficient charging, despite being connected. Details: {0}	Check charger and charger cable. The alarm will clear at next functional charging session for the vehicle.
VEHICLE_TARGET_SOC_NOT_RE ACHED	Target SOC is not reached. Scenario: {0} SOC at time of alarm: {1}%, target SOC: {2}%, charger connected: {3}	
VEHICLE_MODEM_NETWORK_C ONNECTION	Problem connecting to mobile data network. Details: {0}	Check SIM for debris or misplacement. Dismount, clean and remount. Check SIM card validity.
VEHICLE_GPS_UNAVAILABLE	GPS is currently unavailble due to modem reset. Which in turn is caused by problem connecting to mobile data network. Modem has been requested to reset at {0}.	Check SIM for debris or misplacement. Dismount, clean and remount. Check SIM card validity.
VEHICLE_STARTER_BATTERY_LO W_VOLTAGE	Critially low battery voltage on the starter battery. Details: {0}.	Connect charger.
VEHICLE_SMOKE_DETECTOR_AL ARM	Smoke detector disconnected or active	
VEHICLE_FIRE_DETECTOR_ALAR M	Fire detector disconnected or active	
VEHICLE_EXTERNAL_POWER_DEA CTIVATED_DUE_TO_LOW_VOLT AGE_THRESHOLD	External power deactivated due to lower voltag threshold hit	
VEHICLE_HANOVER_DPI_DUPLIC ATE_ADDRESS_ERROR ({0})	Hanover duplikat av logisk address {1}.	

Fault	(Synopsis), Description	Proposed Repair Action
LOW_SOC_WARNING	Varning för låg SOC. Batteristatus: {0}%. Gräns för varning: {1}%.	Ladda batterier så snart som möjligt.
LOW_SOC_LIMP_MODE	"Limp mode"-varning pga mycket låg SOC. Batteristatus: {0}%. Gräns för varning: {1}%.	Parkera fordonet på en säker plats, kontakta därefter servicepersonal.